

1 Frequently asked questions

On our homepage www.bebetel.com you will find:

- ➔ Trouble shooting.
- ➔ User manual in different languages.

1.1 Connection to ISDN or Internet telephony VoIP

bébétel® is designed to connect to the analogue telephone line, but can be used with ISDN or an analogue VoIP-terminal. Connect **bébétel**® the same way as you would connect a fax.

bébétel® has to be connected to one of the analogue ports.



Port for analogue terminal equipment:

- **bébétel**®
- Fax
- Answering machine

Note:

- ISDN: We recommend selecting a subscriber number (MSN) for the **bébétel**® other than the main-number ➔ manual of your adaptor.
- Voice over Internet protocol (VoIP): In case of mains power failure or internet breakdown there will be no telephone connection.
- If your private exchange does not support an analogue connection you probably can connect it to an analogue port of your terminal equipment (modem, telephone) or you have to buy an interface converter.
- If you cannot find an analogue port, you may use **bébétel**® in Bluetooth mode.

1.2 Connection fee due to telephone call?

bébétel® only starts a call if an alarm situation is detected. Please note that you will incur costs for calls to your mobile or pager. These may vary according to certain factors such as time of day or day of the week and should therefore be confirmed by your individual service provider.

Note:

- Make sure that rejected calls are not diverted to an answering machine, i.e. turn off the voice mail function on phone B.

1.3 Examples for Bluetooth setup

Sony Ericsson K810i/W810i

MENU → Settings+Select+Navigation key left → Connectivity Bluetooth+Select → My devices+Select → New device+Add → Device found bebetel+Select → Passcode: <PIN-Code>+OK → bebetel+Connect → More → Allow connection+Select → Always allow+Select

Nokia 6021/6234

MENU → Settings+Select → Connectivity+Select → Bluetooth+Select → Search for audio enhancements+Select → Devices found bebetel+Select → Enter passcode: <PIN-Code>+OK → Paired devices+Select → bebetel+Options → Auto conn. Without confirmation=Yes

Benq S68

MENU → Settings+✓ → Connectivity+✓ → Bluetooth+✓ → Bluetooth sett.+✓ → Search+✓ → Audio+✓ → Last srch.result bebetel+Options → Trust+✓ → Please enter passcode for: bebetel <PIN-Code>+✓

Samsung SGH-D600E

MENU → Settings+Select → Bluetooth+Select → My devices+Select → Search new device+Select → More devices bebetel+Select → Bond with bebetel?+YES → <PIN-Code>+OK → bebetel+Options → Authorize device+Select

Motorola V525

MENU → Settings+Select → Connection+Select → Bluetooth Link+Select → Hands-free+Select → [Lock for new devices]+Select → Scan result bebetel+Select → Bond with bebetel+Yes → Enter <PIN-Code>+OK

Note:

- ⚡ If connection fails:
 - ➡ Delete all other paired Bluetooth-devices in mobile A and retry.
 - ➡ Activate Bluetooth on mobile A only ↗ 4, because **bébétel®** may be already connected to another mobile phone nearby.
- ⚡ In the main, each mobile phone with integrated Bluetooth should work with **bébétel®**. But Leitronic AG can not guarantee that each mobile phone can be paired.
- ⚡ More information regarding Bluetooth-connection can be found on our web-side: www.bebetel.com/bluetooth.

1.4 Monitoring two rooms


If you want to monitor two separate rooms, you can place optional **bébételITWIN®** in the second location and connect to the **bébétel®** unit (cable 8m). Loudspeaker and microphone are integrated in **bébételITWIN®** ↗ 8.4.

1.5 Touch tone commands


If you want to use **bébétel®** to its full potential, you need a touch tone pad at the hand set where telephone calls are to be answered. Most of today's telephone sets send touch tone signals also known as DTMF or tone dialling. Older telephone sets use pulse dialling. If you do not have any touch tone device you cannot execute touch tone commands ↗ 6.7.

1.6 Signals (beeps)

Beeps from **bébétel**® loudspeaker

Number	Message/Cause
1	Acknowledgement beep
2	Wrong re-entering of PIN-code, ringing cycle etc.
3	Battery is low  7.7
6	Dial-tone missing

Beeps in called telephone (phone B)

Number	Message/Cause
1	Acknowledgement beep
2	PIN-code has been entered incorrectly or activation by motion detector (no motion at the moment)
3	Activation by motion detector (motion still going on)
4	<i>Connection time-out</i>  6.7.1

1.7 Battery check/replacement

If **bébétel**® emits three beeps when switched on battery must be replaced.



Disconnect the telephone-line before opening battery compartment. This is to avoid contact with dangerous telephone network voltage.

1. Set function switch to OFF.
2. Open battery compartment and remove old battery.
3. Insert new battery and close battery compartment.

Note:

- Always use faultless 9 V-batteries.
- Recycle old batteries properly.

1.8 Maintenance

Set function switch to OFF and remove telephone cord. Clean **bébétel**® if necessary with a damp cloth and dry it afterwards. Note: Do not use cleaning agents or solvent.